


HOW TO...


INSTALL AN INTERNAL DOOR LINING/SOFTWOOD DOOR LINING

DOOR LININGS : 28 X 106/131mm X 2.1m TO FIT DOOR
SIZES 686mm, 762mm AND 838mm (27", 30" AND 33")

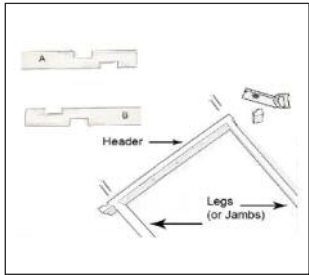

Flip the HEADER so that the required re-bates are facing downwards, this depends on the width of the door.

Fit the LEGS by way of four wood screws. Pilot-drill the holes first. Then, saw off any excess wood from the HEADER.

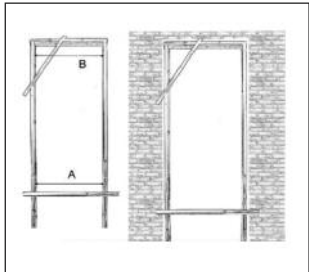


Stabilise the lining by temporarily fixing two pieces of scrap timber as shown, make sure dimension A is EXACTLY the same as B. This is IMPORTANT.

Then offer the lining kit into the doorway aperture. This should NOT be too tight as this can cause the door to rub on the frame after it has been hung.



Using shims, blocks or wedges, secure in place the lining and make sure the HEADER is level. Use a spirit level.

Also make sure the legs are truly vertical and upright. Again, these things ensure the door will hang properly.

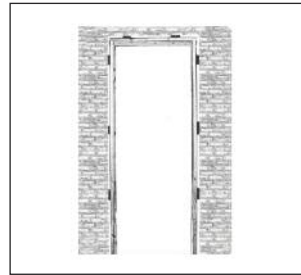

Making sure the frame stays straight, level and perfectly upright, fix the frame to the wall by way of 100mm screws. Frame fixings may be required depending on the material you are fixing to.

ALWAYS ensure the lining is level, straight and parallel during the fixing stage.



The door stops can be fitted AFTER the door has been hung, it is much easier to locate them perfectly this way. They can be pinned into place.

All fixing holes can be filled and sanded prior to staining or painting.

TOOLS REQUIRED

